# HOME DECORATORS collection®

BF-21009 OXFORD DOUBLE BOOKCASE CABINET 72"HX64"W

## ASSEMBLY INSTRUCTIONS

Made In China

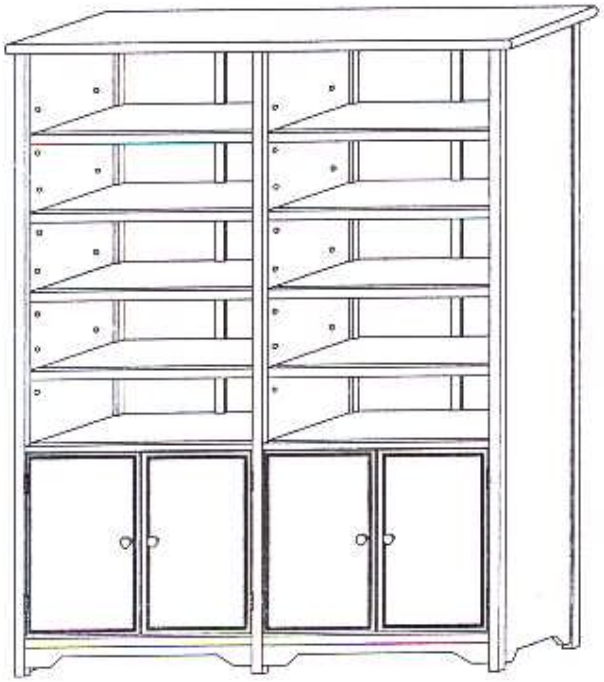

Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, Compare with parts list to be sure all part are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service please indicate the model number and code letter of part(s) need

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

# PARTS LIST

| | | |
|---|---|---|
| A  TOP PANEL-1PC | B 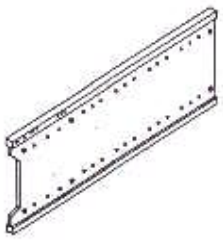 LEFT SIDE PANEL-1PC | C 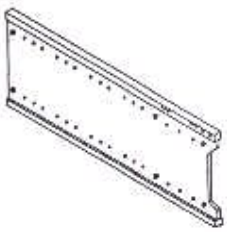 RIGHT SIDE PANEL-1PC |
| D 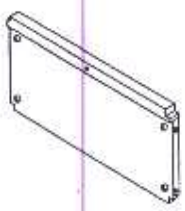 LEFT BOTTOM PANEL-1PC | E RIGHT BOTTOM PANEL-1PC | F LOW PANEL-2PCS |
| G 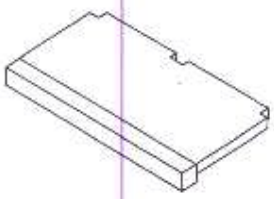 LEFT SHELF-5PCS | H REAR PANEL GUIDE-2PCS | I LEFT ACROSS PANEL-1PC |
| J RIGHT DOOR-2PCS | K LEFT DOOR-2PCS | N 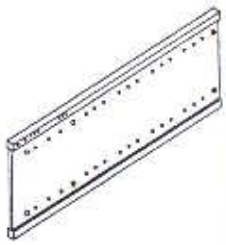 STAND PANEL-1PC |

| | | |
|---|---|---|
| M 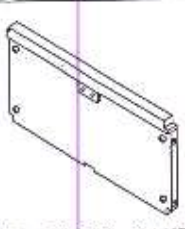 RIGHT ACROSS PANEL-1PC | L BACK PANEL-4PCS | O 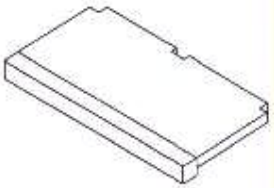 RIGHT SHELF-5PCS |
| P CAM-LOCKS-22PCS | Q CAM-BOLTS-22PCS | R SCSREWS-6PCS |
| S SCREWS-52PCS | T DOWELS-8PCS | U  LARGE MAGNETS-2PCS |
| V  HINGES-8PCS | W  FEMALE MAGNETS-4PCS | X KNOBS-4PCS |
| Y SHELF SUPPORTS-40PCS | Z SCREWS-4PCS | A1 CAM-TOOL-1PC |
| B1 SCREWS-2PC | C1 SCREWS-72PCS | W1 prevent fall down HOOK-2PCS |
| X1 prevent fall down SCREWS-2PCS | Y1 prevent fall down HANGER-2PCS | Z1 prevent fall down SCREWS-2PCS |

REMARK: THE LETTER STICKED IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

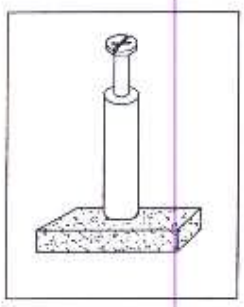

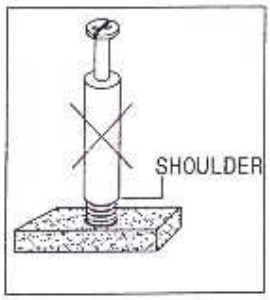


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

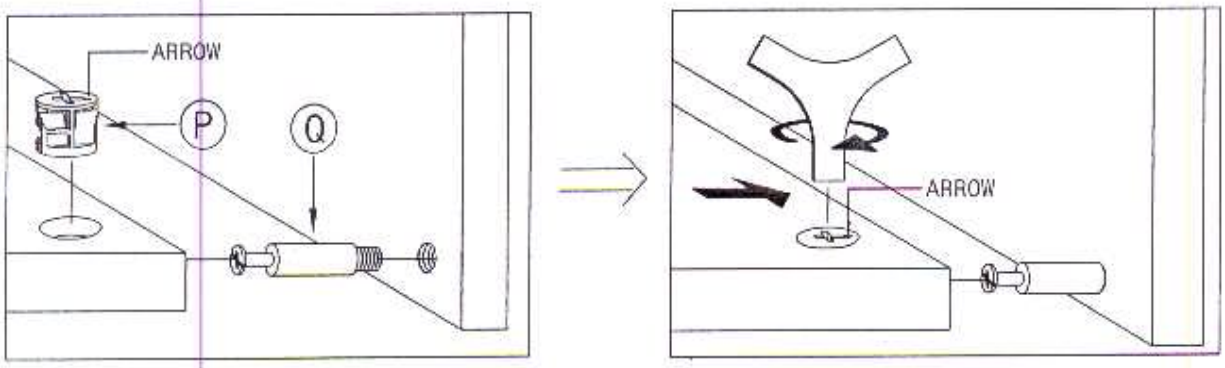


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

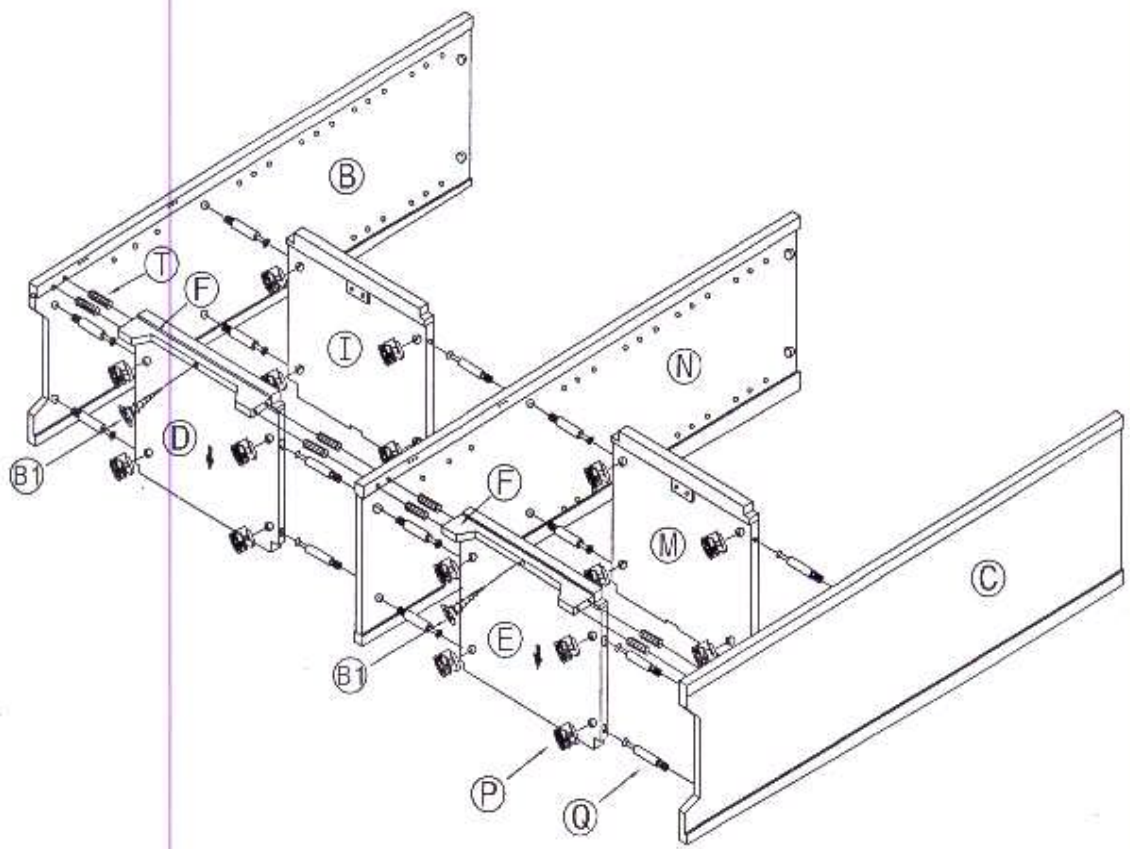


1). ASSEMBLE SIDE PANEL(B/C).

- ATTACH 2 LOW PANEL(F)TO BOTTOM PANEL(D/E)USING 2 SCREWS(B1).
- INSERT THE 8 DOWELS(T)INTO HOLES IN LOW PANEL(F).
- ROTATE 16 CAM-BOLTS(Q)INTO HOLES IN THE SIDE PANEL(B/C)AND STAND PANEL(N).
- PLACE CAM-BOLTS(Q)INTO HOLES IN PANEL(D/E/I/M)AND ATTACH USING 16 CAM-LOCKS(P).

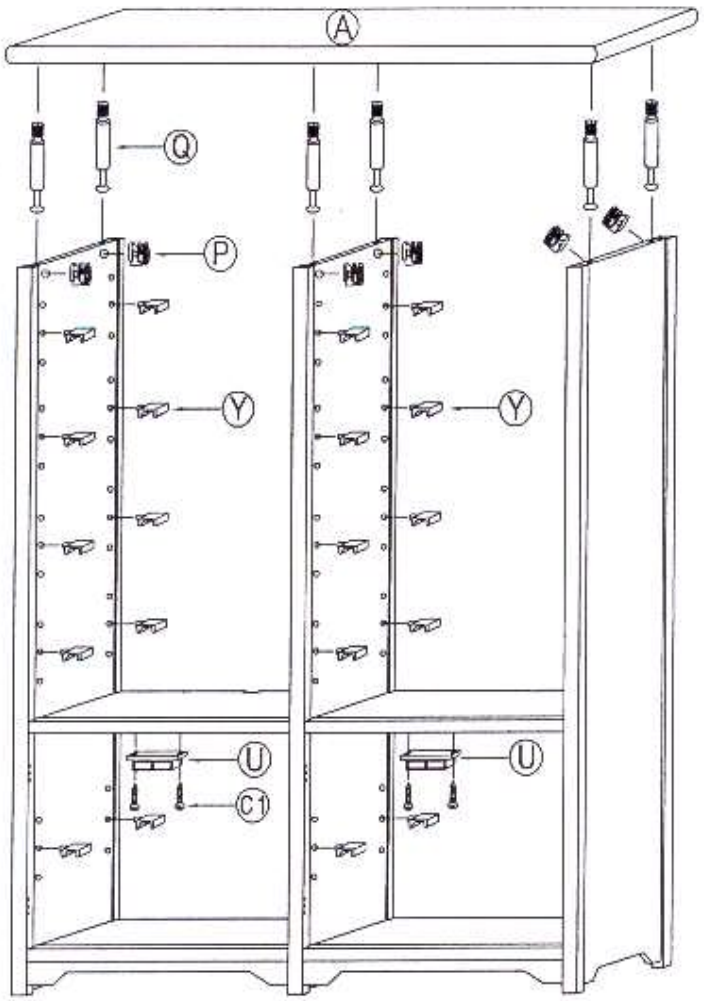


## 2). ASSEMBLE TOP PANEL(A).

- ROTATE 6 CAM-BOLTS(Q)INTO HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(Q)INTO HOLES IN PANEL(B/C/N)AND ATTACH USING 6 CAM-LOCKS(P).
- ATTACH THE LARGE MAGNET(U)TO ACROSS PANEL(I/M)USING 4 SCREWS(C1).
- INSERT THE 40 SHELF SUPPORTS(Y)INTO HOLES IN SIDE/STAND PANEL(B/C/N).

KNOB: (Attach another door(J/K)by the same method as the left door(K)with screws and hinges).

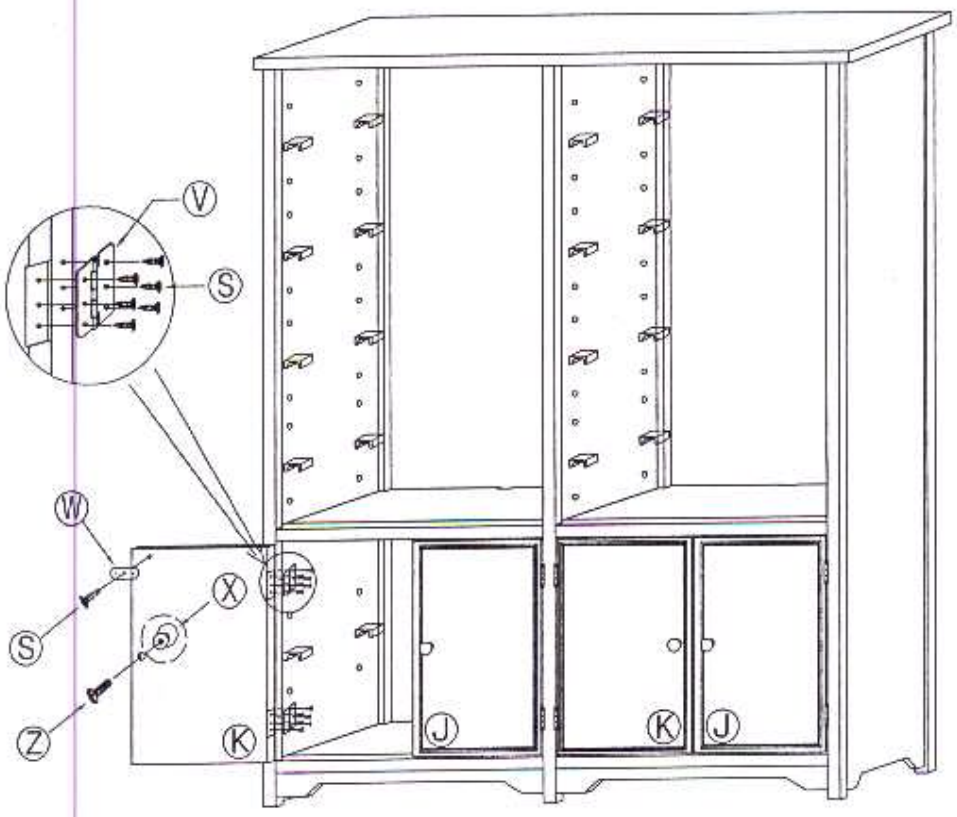


3).ASSEMBLE THE DOORS(J/K).

- ATTACH 2 HINGE(V)TO LEFT DOOR(K)AND LEFT SIDE PANEL(B)USING 12 SCREWS(S).
- ATTACH THE FEAMEL MAGNETS(W)TO LEFT DOOR(K)USING SCREWS(S).
- ATTACH THE KNOB(X)TO LEFT DOOR(K)USING SCREWS(Z).

Note:Before you assemble the back panel,please make sure the doors have an even gap around them.If uneven,shift the unit left or right until the doors are evenly spaced.

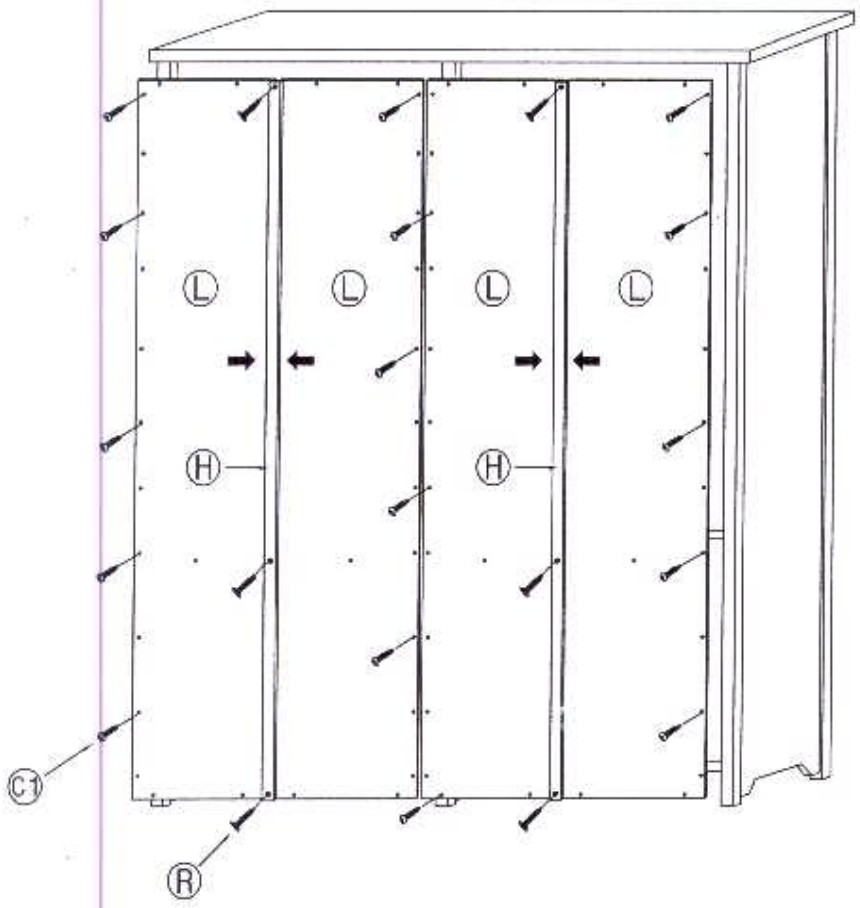


4). ASSEMBLE THE BACK PANEL(L).

- INSERT BACK PANEL(L)INTO SLOTS IN REAR PANEL GUIDE(H).
- ATTACH BACK PANEL(L)AND REAR PANEL GUIDE(H)USING SCREWS(C1/R).

5). ASSEMBLE THE SHELF(G/O).

- PUT THE 10 SHELF(G/O)ONTO THE SHELF SUPPORTS(Y).

I • ATTACH 2 HOOK(W1)USING 2 SCREWS(X1)IN THE PREDRILLED HOLES OF REAR TOP PANEL.

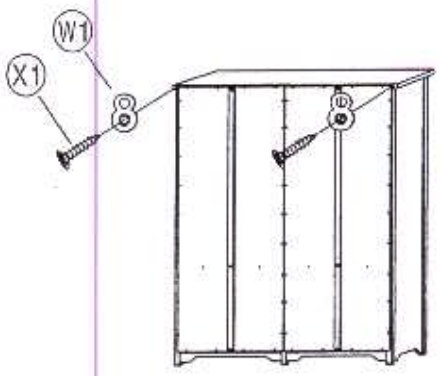


II • DRILLING TWO HOLES ON THE WALL IT AS BETWEEN TOP PANEL HOLES DISTANCE.

• PUT 2 HANGER(Y1)HIT INTO HOLES IN WALL AND ROTATE 2 SCREWS(Z1)INTO HANGER(Y1).